


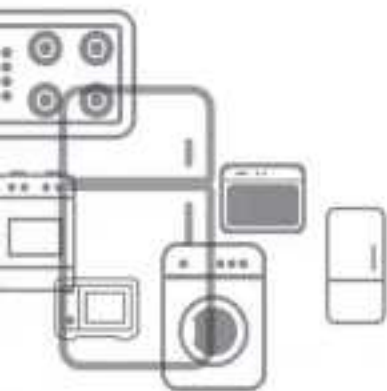

Frigorífico F166Z

Manual de **instrucciones**

User manual

easy for you,
for everyone

onwa

on the way of perfection

INFORMACIÓN DE SEGURIDAD

En aras de su seguridad y para garantizar el uso correcto, antes de la instalación y el primer de uso de este aparato, lea atentamente este manual de usuario, incluidos los consejos y advertencias. Para evitar errores innecesarios y accidentes, es importante asegurarse de que todas las personas que utilicen el aparato están completamente familiarizadas con su funcionamiento y medidas de seguridad. Guarde estas instrucciones y no olvide mantenerlas junto al aparato en caso de su desplazamiento o venta para que quienes lo utilicen a lo largo de su vida sean debidamente informados sobre su uso y seguridad. Para la preservar seguridad de vidas y bienes, siga las precauciones de este manual de instrucciones ya que el fabricante no se hace responsable por daños y perjuicios causada por omisión.

SEGURIDAD EN NIÑOS Y PERSONAS VULNERABLES.

- Este aparato no debe ser utilizado por niños ni personas con las capacidades físicas, sensoriales o mentales reducidas o con falta de experiencia y conocimiento, si no es con la supervisión de un adulto.

- Los niños deben ser supervisados para asegurarse de que no jueguen con el aparato.
- La limpieza y el mantenimiento del usuario no deberán ser realizados por niños a menos de que tengan edades de 8 años en adelante y sean supervisados.
- Mantener el embalaje lejos de los niños. Puede existir riesgo de asfixia.
- Si usted va a desechar el aparato desconecte el cable de la toma de corriente, corte el cable de conexión (tan cerca del aparato como pueda), y retire la puerta para evitar que algún niño jugando sufra una descarga eléctrica o quede atrapado en su interior.

SEGURIDAD GENERAL

ADVERTENCIA! Mantenga las aberturas de ventilación internas y externas del aparato libre de obstáculos.

ADVERTENCIA! No utilice dispositivos mecánicos u otros medios para acelerar el proceso de descongelación que no sean los recomendados por el fabricante.

ADVERTENCIA! No dañe el circuito de frío.

ADVERTENCIA! No utilice otros aparatos eléctricos en el interior de los aparatos de refrigeración, a

menos que sean autorizados para tal fin por el fabricante.

- No guarde latas de aerosol con un propulsor inflamable en este aparato, podrían explotar
- El isobutano (R600a) que contiene el frigorífico dentro del circuito del aparato, es un gas natural con un alto nivel de compatibilidad medioambiental, aunque es inflamable.
- Durante el transporte y la instalación del aparato, asegúrese que ninguno de los componentes del circuito refrigerante se dañe. Evite fuegos y fuentes de inflamación.
- Ventile bien la habitación en la que el aparato se encuentra.
- Es peligroso alterar las características o modificar el producto en cualquier manera. Cualquier daño en el cable puede causar un cortocircuito, fuego y / o descarga eléctrica. Este aparato está diseñado para ser utilizado en usos domésticos.

ADVERTENCIA! Cualquiera de los componentes eléctricos (enchufe, cable de alimentación, compresor y etc.) deben ser reemplazados por un agente servicio autorizado o personal cualificado.

- El cable de alimentación no debe ser manipulado.
- Asegúrese de que el enchufe no esté roto o

dañado por la parte trasera del aparato. Un enchufe aplastado o dañado puede recalentarse y provocar un incendio.

- Asegúrese de que se puede llegar a la clavija de alimentación del aparato.
- No tire del cable de red.
- Si la toma de corriente está suelta, no inserte la clavija de alimentación. Hay riesgo de descarga eléctrica o un incendio.
- Usted no debe utilizar el aparato sin la lámpara. Este aparato es pesado. Se debe tener cuidado al moverlo.
- No retire ni toque elementos del compartimento del congelador si tiene las manos húmedas/mojadas, ya que esto podría causar abrasiones de la piel o quemaduras por el hielo.
- Evitar la exposición prolongada del aparato a la luz solar directa.

USO DIARIO

- No ponga cosas calientes en las partes de plástico del aparato.
- No coloque los alimentos directamente contra la pared posterior.
- Los alimentos congelados no se deben volver a congelar una vez descongelados.

- Almacene alimentos pre envasados congelados siguiendo las instrucciones del fabricante de la comida congelada.
- Las recomendaciones de almacenamiento del fabricante deben ser seguidas estrictamente. Consulte las instrucciones pertinentes.
- No coloque bebidas gaseosas en el congelador porque crea presión en el envase, lo que puede ocasionar que explote y podría dañar el aparato.
- Los polos de helado pueden causar quemaduras si se consumen al instante en el que son sacados del aparato.

CUIDADO Y LIMPIEZA

- Antes del mantenimiento, apague el aparato y desconecte el enchufe de la toma de corriente.
- No limpie el aparato con objetos metálicos.
- No utilice objetos puntiagudos para eliminar la escarcha del aparato. Utilice una espátula de plástico.
- Examine periódicamente el desagüe en el refrigerador del agua descongelada. Si es necesario, limpie el desagüe. Si el desagüe está obstruido, el agua se acumula en la parte inferior del aparato.

INSTALACIÓN

¡Importante! Para la conexión eléctrica, siga cuidadosamente las instrucciones dadas en los párrafos específicos.

- Desempaque el aparato y compruebe si hay daños en el mismo. No conecte el aparato si está dañado. Informe de los posibles daños y perjuicios inmediatamente al lugar donde lo compró. En este caso, conservar el embalaje.
- Es aconsejable esperar al menos cuatro horas antes de conectar el aparato para permitir que el aceite regrese al compresor.
- La circulación de aire adecuada debe ser alrededor del aparato, la falta de esto provoca sobrecalentamiento. Para conseguir una ventilación adecuada, siga las instrucciones pertinentes de instalación.
- Siempre que sea posible debe haber un espacio entre el producto y la pared para evitar que se alcancen las zonas cálidas o se toquen (compresor, condensador) para evitar posibles quemaduras.
- El aparato no debe ser colocado cerca de radiadores u hornos.
- Asegúrese de que el enchufe de la red es accesible después de la instalación del aparato.

REPARACIONES

- Cualquier trabajo de tipo eléctrico necesario para efectuar la reparación del aparato debe ser realizado por una persona competente o electricista cualificado.
- Este producto debe ser reparado por un centro de servicio autorizado, y únicamente se deben usar las piezas de repuesto.

AHORRO DE ENERGIA

- No coloque alimentos calientes en el aparato.
- No coloque alimentos muy cerca uno del otro. Esto impide que el aire que circule correctamente.
- Asegúrese de que los alimentos no toquen la parte posterior de los compartimentos.
- Si la electricidad se apaga, no abra la puerta.
- No abra la puerta con frecuencia.
- No mantenga la puerta (s) abierta durante demasiado tiempo.
- No coloque el termostato excediéndose en las temperaturas bajas.
- Algunos accesorios tales como cajones, se pueden quitar para obtener mayor volumen de almacenamiento y un menor consumo energético.

Protección ambiental

 Este refrigerador no contiene gases que puedan dañar la capa de ozono, ni en su circuito refrigerante ni en los materiales de aislamiento. La aplicación no debe ser desechada junto con los residuos domésticos. La espuma de aislamiento contiene gases inflamables; el refrigerador, por tanto, debe ser desechado de acuerdo a las disposiciones específicas estipuladas por las autoridades locales. Evite dañar la unidad de enfriamiento, especialmente el intercambiador de calor. Los materiales utilizados en este electrodoméstico marcados con el símbolo  son reciclables.



El símbolo en este producto o en su embalaje indica que este producto no debe ser tratado como residuo doméstico, sino que debe ser llevado a un centro de recolección adecuado para el reciclaje de sus componentes eléctricos y electrónicos. Al asegurarse que el producto sea eliminado de forma correcta, ayudará a prevenir las potenciales consecuencias negativas para el medio ambiente y la salud humana, que podrían ser causadas de otra forma por el manejo inapropiado



Información de seguridad




de desechos de este producto. Para obtener más información sobre el reciclaje de este producto, contáctese con el municipio local, su servicio de eliminación de residuos domésticos local o el local donde compró el producto.

Materiales de embalaje

Los materiales con el símbolo son reciclables. Deseche el embalaje en los contenedores de recolección para reciclaje. Eliminación del refrigerador

1. Desconecte el cable de conexión a red del tomacorriente de red.
2. Corte el cable y deséchelo.

PARTES DEL PRODUCTO

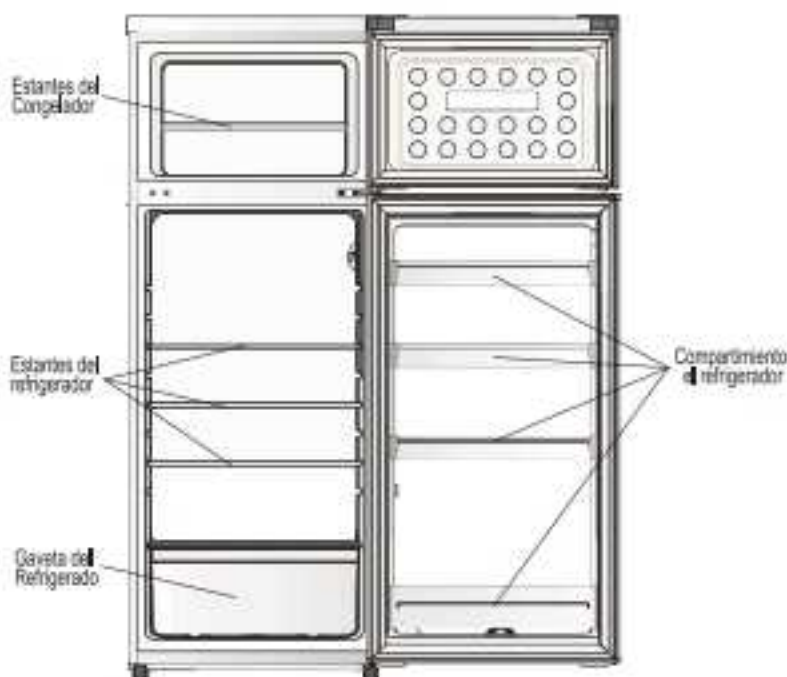


(imagen no contractual con el modelo adquirido)


CAMBIO SENTIDO PUERTAS

En caso de que necesite cambiar el sentido de apertura de las puertas siga los siguientes pasos:


1. Retire cuatro tornillos en la parte superior cubran y luego levántelo.

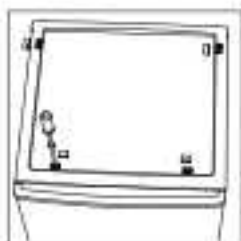

2. Desatornillar la bisagra superior. Retire la puerta superior y colóquelo sobre un cojín suave para evitar arañazos.

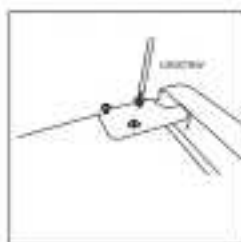


3. Quitar el pasador con un destornillador y girar el soporte de la bisagra. Luego vuelva a colocar el perno para soporte de la bisagra.

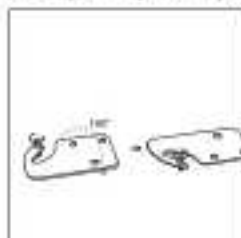


4. Desenrosque la bisagra central. Luego levante la puerta inferior y colóquelo sobre un cojín suave para evitar arañazos.




5. Mueva que la bisagra cubiertas de izquierda a derecha.

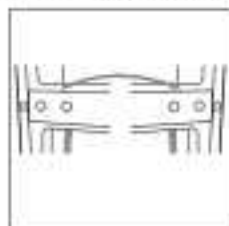

6. Desatornillar la bisagra inferior. Luego retire las patas de ambos lados.

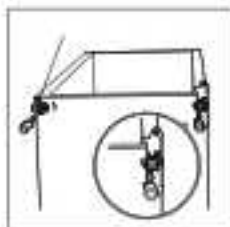


7. Desatornille y retire el pasador de la bisagra inferior, entregar el soporte y reemplácelo.

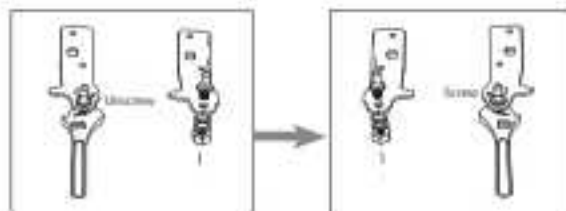

8. Vuelva a colocar el soporte de montaje de la bisagra inferior. Vuelva a colocar ambos pies ajustables. Transfiera la puerta inferior a la posición de propiedad.



9. Hacer la bisagra media reversible la dirección 180°C, a continuación, transfiera a la posición de izquierdo de la propiedad. Hacer la bisagra intermedia en la parte superior del agujero de la puerta inferior, luego apriete los tornillos.

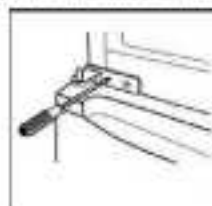

10. Volver a colocar la puerta superior. Asegurar la puerta está alineada horizontalmente y verticalmente para que el sello se cierre por todos lados antes de finalmente apretar la bisagra superior. Entonces inserte la bisagra y atornillelo a la parte superior de la unidad.



11. Poner la tapa y atornille nuevamente.




INSTALACIÓN

Requisitos de espacio


Deje suficiente espacio para que la puerta pueda abrir.

Deje un espacio de al menos 50mm en ambos lados.

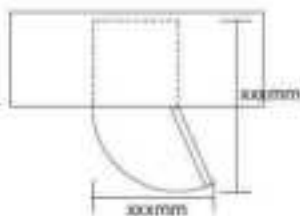

Nivelación de la unidad

Para hacer esto ajustar las dos patas niveladoras en la parte delantera de la unidad. Si la unidad no está nivelada, las puertas y el cierre magnético no cerrarán adecuadamente.

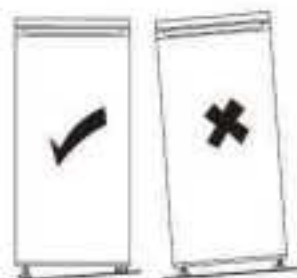

Posicionamiento

Instale este aparato en un lugar donde la temperatura ambiente corresponda a la clase climática indicada en la placa de características del aparato:

Clase climática	Temperatura ambiente
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+16°C to +38°C
T	+16°C to +43°C

UBICACIÓN

El aparato debe instalarse lejos de fuentes de calor, como radiadores, calderas, luz directa del sol, etc. Asegúrese de que el aire pueda circular libremente alrededor de la parte posterior del aparato. Para asegurar el mejor rendimiento, si el aparato se coloca por debajo de un armario o pared colgante, la distancia mínima entre la parte superior del aparato y el armario o pared colgante debe ser de al menos 100 mm. Sin embargo, intente no colocar el aparato debajo de un armario o pared colgante. Una nivelación adecuada se consigue ajustando una o ambas patas en la base del aparato.

¡Advertencia! Debe ser posible desconectar el aparato de la red eléctrica; por lo tanto el enchufe debe ser fácilmente accesible después de la instalación.

CONEXIÓN ELÉCTRICA

Antes de conectar el aparato, asegúrese de que la tensión y la frecuencia indicada en la placa de características corresponden a su fuente de alimentación interna. El aparato debe estar conectado a una toma de tierra. El enchufe del cable de alimentación está dotado con un contacto con este propósito. Si la toma de corriente de la instalación doméstica no está conectada a tierra, conecte el aparato a una toma de tierra externa conforme a la normativa vigente, consultar a un electricista cualificado. El fabricante declina toda responsabilidad si no se respetan las normas de seguridad.

PRIMER USO

Limpieza del interior

Antes de utilizar el aparato por primera vez, lave el interior por todas las partes internas con agua tibia y jabón neutro, a fin de eliminar el característico olor de un producto nuevo. Secar luego cuidadosamente.

¡Importante! No use detergentes o polvos abrasivos que puedan dañar el aparato:

Ajuste de la temperatura

- ✓ Enchufe el electrodoméstico. La temperatura interna se controla por un termostato. Hay 6 (8) ajustes. El 1 es el más cálido, 5 (7) las posiciones más frías. 0 es apagado.
- ✓ El aparato puede no funcionar a la temperatura correcta si se encuentra en un lugar particularmente caliente o si se abre la puerta a menudo.

Congelación de alimentos frescos

- El congelador es adecuado para la congelación de alimentos frescos, el almacenamiento de alimentos congelados y ultra congelados para un largo periodo de tiempo.
- Coloque los alimentos frescos a congelar en el compartimento inferior.
- Se especifica la cantidad máxima de alimentos que se pueden congelar en 24 horas en la placa de características.
- El proceso de congelación dura 24 horas: durante este periodo no agregar otros alimentos a congelar.

Almacenamiento de comida congelada

La primera vez que comience a utilizar el aparato o después de un periodo sin uso: Antes de poner el producto en el compartimiento del congelador, dejar que el aparato funcione al menos durante 2 horas en las configuraciones más altas.

¡Importante! En caso de descongelación accidental, por ejemplo, el aparato ha estado apagado durante un tiempo prolongado, el alimento descongelado debe ser consumido rápidamente o cocinado inmediatamente y volverlo a congelar (después de cocido).

Descongelación

Los alimentos ultra congelados o congelados, antes de ser utilizados se pueden descongelar en el frigorífico o en una sala a temperatura ambiente, dependiendo del tiempo disponible para esta operación. Pequeñas porciones, pueden cocinarse congeladas directamente del congelador. En este caso el tiempo de cocción será más largo.

ACCESORIOS

Baldas móviles

Las paredes del refrigerador están equipadas con una serie de corredores de modo que los estantes pueden colocarse como se desee.



Colocación de los balcones de la puerta

Para permitir el almacenamiento de los paquetes de alimentos de diferentes tamaños, los balcones de la puerta se pueden colocar a diferentes alturas. Para hacer estos ajustes proceda de la siguiente manera: tire gradualmente el balcón en dirección de las flechas hasta que se libere, a continuación, vuelva a colocar como sea necesario.



Cubos de Hielo

Este aparato puede estar equipado con uno o más moldes para producir hielo.

CAMBIO DE LA LUZ INTERIOR

La luz interna es de tipo LED. Para reemplazar la lámpara, póngase en contacto con un técnico cualificado.



CONSEJOS PRACTICOS Y SUGERENCIAS

Consejos prácticos para sacarle el máximo partido al proceso de congelación.

- La cantidad máxima de alimentos que se pueden congelar en 24 horas se muestra en la placa.
- El proceso de congelación dura 24 horas. No deben añadirse más alimentos durante este periodo.
- Congelar productos alimenticios de calidad superior, frescos y perfectamente limpios.
- Preparar la comida en pequeñas porciones para que ésta pueda congelarse rápidamente y para que sea posible posteriormente descongelar sólo la cantidad necesaria.
- Envolver los alimentos en papel de aluminio o polietileno y asegúrese de que los paquetes sean herméticos.
- No permita que los alimentos frescos sin congelar toquen los alimentos congelados, evitando así un aumento de la temperatura de estos últimos.
- Los alimentos magros se almacenan mejor y más tiempo que los grasos; la sal reduce el tiempo de almacenamiento de los alimentos.
- Es aconsejable mostrar la fecha de congelación en cada envase individual para facilitar la eliminación del producto del congelador.

Para obtener el mejor rendimiento de este aparato, usted debe:

- Asegurarse de que los productos alimenticios comercialmente congelados fueron almacenados adecuadamente por el minorista.
- Asegúrese de que los alimentos congelados se transfieren desde la tienda de alimentos al congelador en el menor tiempo posible.

- No abra la puerta con frecuencia ni la deje abierta más de lo absolutamente necesario.
- Una vez descongelados los alimentos se deterioran rápidamente y no se puede volver a congelar.
- No exceda el periodo de almacenamiento indicado por el fabricante de alimentos.

Consejos para la refrigeración de alimentos frescos

Para obtener el mayor rendimiento:

- No guarde alimentos calientes o líquidos en evaporación.
- Envuelva en bolsas de plástico los alimentos y colóquelos en los estantes de vidrio por encima del cajón de las verduras.
- Para mayor seguridad, almacene de esta manera sólo uno o dos días como máximo.
- Alimentos cocinados, platos fríos, etc... estos deben ser cubiertos y se pueden colocar en cualquier bandeja.
- Frutas y hortalizas: deben limpiarse y colocarse en el cajón (s) especial, situado en el fondo.
- Mantequilla y queso: deben colocarse en recipientes adecuados o envueltos en papel de aluminio o bolsas de polietileno para excluir el aire tanto como sea posible.
- Botellas de leche: se almacenan tapados en las baldas de la puerta.
- Botellas de leche: éstas deben tener una tapa y deben ser almacenados en los balcones de la puerta.

LIMPIEZA

Por razones de higiene al interior del aparato, incluidos los accesorios interiores, se debe limpiar con regularidad.

¡Precaución! El aparato no puede ser conectado a la red eléctrica durante la limpieza. ¡Peligro de descarga eléctrica! Antes de limpiar el aparato apáguelo y quite el enchufe de la red eléctrica o apague o desconecte el interruptor del circuito o fusible. Nunca limpie el aparato con un limpiador de vapor. La humedad podría acumularse en los componentes eléctricos, ¡peligro de descarga eléctrica! Los vapores calientes pueden conducir al daño de piezas de plástico. El aparato debe estar seco antes de ponerlo de nuevo en funcionamiento

¡Importante! Los aceites etéreos y disolventes orgánicos pueden dañar a las piezas de plástico, ácido butírico o los limpiadores que contengan ácido acético. No permita que estas sustancias entren en contacto con las partes de este electrodoméstico.

- No use limpiadores abrasivos.
- Retire los alimentos del congelador. Almacene en un lugar fresco y bien cubierto.
- Apague el aparato y retire el enchufe de la red eléctrica, o apague o encienda el interruptor de circuito del fusible.
- Limpiar el aparato y los accesorios interiores con un paño y agua tibia.
- Después de la limpieza, limpie con agua fresca y luego frote en seco.
- Después de que el aparato este seco, puede volver a ponerlo en servicio.

SOLUCION DE PROBLEMAS

Problema	Causas posibles	Solución
El aparato no funciona	Perilla de regulación de la temperatura está establecida en el número "0".	Ajuste el mando a otro número para encender el aparato.
	Enchufe principal no está enchufado o está suelto.	Inserte el enchufe de red.
	El fusible se ha disparado o está defectuoso.	Inspeccione el fusible y cámbielo si es necesario.
	El enchufe está defectuoso	Averías principales deben de ser corregidas por un electricista
La comida está demasiado caliente.	La temperatura no está ajustada correctamente.	Por favor, busque en la Sección de Configuración Inicial de Temperatura.
	La puerta estaba abierta por un periodo largo de tiempo.	Abra la puerta sólo en la medida necesaria.
	Una gran cantidad de alimentos calientes se colocó en el aparato en las últimas 24 horas.	Gire la regulación de la temperatura a un ajuste más frío temporalmente.

	El aparato se encuentra cerca de una fuente de calor.	Por favor, busque en la sección "ubicación de la instalación".
El aparato enfría demasiado	La temperatura está ajustada demasiado fría.	Gire la perilla de regulación de la temperatura a un ajuste más tibio temporalmente.
Ruidos inusuales	El aparato no está nivelado.	Reajuste las patas
	El aparato toca la pared u otros objetos.	Mover un poco el aparato
	Un componente, por ejemplo, una tubería, en la parte trasera del aparato está tocando otra parte del electrodoméstico o la pared	Si es necesario, doble con cuidado el componente fuera del camino.
Agua en el suelo	El orificio de drenaje del agua está bloqueado	Vea la sección Cuidado y limpieza.

Si el problema persiste. Contacte el servicio técnico.

¡Precaución! Antes de la resolución de problemas, desconecte la fuente de alimentación. Sólo un electricista cualificado o persona competente debe realizar la solución de problemas que no se encuentra en este manual.

¡Importante! El aparato, durante su uso, emite algunos sonidos que son completamente normales del aparato (ruido del compresor, circulación del refrigerante)

Proceso correcto de desecho de este producto



Según la directiva *Waste of Electrical and Electronic Equipment (WEEE)*, los residuos WEEE han de recogerse y tratarse por separado. Si, en el futuro, necesita desprenderse de este producto, NO lo ponga en los residuos domésticos, envíelo a los puntos de recogida WEEE si existen

Marca	ONWA
Modelo	F166Z
Clase de energía	A+
Certificación	CE
Consumo anual de energía:	234kWh / año
Volumen útil refrigerador	199L
Volumen útil congelador	53L
Número de estrellas	4
Sistema de descongelación	Defrost
Autonomía de mantenimiento	1200min
Capacidad de congelación	2.5kg/24h
Clase climática	ST
Nivel de ruido	42dB
Dimensiones	550x580x1645 mm
Tensión	220-240V
Corriente	0.60A


CERTIFICACION CE

Se ha determinado que este producto cumple con la Directiva de Baja Tension (2014/35/EU), la Directiva de Compatibilidad Electromagnetica (2014/30/EU) y la Directiva RoHS (2011/65/EU).



Made in P.R. C. - Imported by:
PROSELCO S.A. C.I.F. A-08347635
C/ Del oro 37 , PG. IND. SUR 28770 ,
COLMENAR VIEJO, MADRID, SPAIN



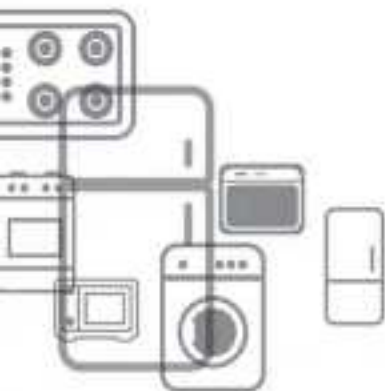

Frigorífico F166Z

Manual de **instrucciones**

User manual

easy for you,
for everyone

onwa

on the way of perfection

Safety information



In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety.

For the safety of life and property keep the precautions of these user's instructions as the manufacturer is not responsible for damages caused by omission.

Children and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given super

Safety information



vision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Children should be supervised to ensure that they do not play with the appliance.

- Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.

- Keep all packaging well away from children. There is risk of suffocation.

- If you are discarding the appliance pull the plug out of the socket, cut the connection cable (as close to the appliance as you can) and remove the door to prevent playing children to suffer electric shock or to close themselves into it.

- If this appliance featuring magnetic door seals is to replace an older appliance having a spring lock (latch) on the door or lid, be sure to make that spring lock unusable before you discard the old appliance.

This will prevent it from becoming a death trap for a child.

General safety

WARNING! Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

WARNING! Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

WARNING! Do not damage the refrigerant circuit.

WARNING! Do not use other electrical appliances (such as ice cream makers) inside of refrigerating appliances, unless they are approved for this purpose by the manufacture.

WARNING! Do not touch the light bulb if it has been on for a long period of time because it could be very hot.¹⁾

• Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

• The refrigerant isobutane (R600a) is contained within the refrigerant circuit of the

Safety information



appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable.

- During transportation and installation of the appliance, be certain that none of the components of the refrigerant circuit become damaged.

- avoid open flames and sources of ignition
- thoroughly ventilate the room in which the appliance is situated

- It is dangerous to alter the specifications or modify this product in any way. Any damage to the cord may cause a short circuit, fire and/or electric shock.

- This appliance is intended to be used in household and similar applications such as

- staff kitchen areas in shops, offices and other working environments;
- farm houses and by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- catering and similar non-retail applications.

Safety information



WARNING! Any electrical components(plug, power cord, compressor and etc.) must be replaced by a certified service agent or qualified service personnel.

WARNING! The light bulb supplied with this appliance is a "special use lamp bulb" usable only with the appliance supplied. This "special use lamp" is not usable for domestic lighting¹⁾.

1) If there is a light in the compartment.

Safety information



- Power cord must not be lengthened.
- Make sure that the power plug is not squashed or damaged by the back of the appliance. A squashed or damaged power plug may overheat and cause a fire.
- Make sure that you can come to the mains plug of the appliance.
- Do not pull the mains cable.
- If the power plug socket is loose, do not insert the power plug. There is a risk of electric shock or fire.
- You must not operate the appliance without the lamp.
- This appliance is heavy. Care should be taken when moving it.
- Do not remove nor touch items from the freezer compartment if your hands are damp/wet, as this could cause skin abrasions or frost/freezer burns.
- Avoid prolonged exposure of the appliance to direct sunlight.

Daily use

- Do not put hot on the plastic parts in the appliance.
- Do not place food products directly against the rear wall.
- Frozen food must not be re-frozen once it has been thawed out¹⁾.
- Store pre-packed frozen food in accordance with the frozen food manufactures instructions¹⁾.
- Appliances manufactures storage recommendations should be strictly adhered to. Refer to relevant instructions.
- Do not place carbonated or fizzy drinks in the freezer compartment as it creates pressure on the container, which may cause it to explode resulting in damage to the appliance¹⁾.
- Ice lollies can cause frost burns if consumed straight from the appliance¹⁾.

Care and cleaning

- Before maintenance, switch off the appliance and disconnect the mains plug from

Safety information



the mains socket.

- Do not clean the appliance with metal objects.
- Do not use sharp objects to remove frost from the appliance. Use a plastic scraper¹⁾.
- Regularly examine the drain in the refrigerator for defrosted water. If necessary, clean the drain. If the drain is blocked, water will collect in the bottom of the appliance²⁾.

1) If there is a freezer compartment.

2) If there is a fresh-food storage compartment.

Installation

Important! For electrical connection carefully follow the instructions given in specific paragraphs.

- Unpack the appliance and check if there are damages on it. Do not connect the appliance if it is damaged. Report possible damages immediately to the place you bought it. In that case retain packing.
- It is advisable to wait at least four hours before connecting the appliance to allow the oil to flow back in the compressor.
- Adequate air circulation should be around the appliance, lacking this leads to overheating. To achieve sufficient ventilation follow the instructions relevant to installation.
- Wherever possible the spacers of the product should be against a wall to avoid touching or catching warm parts (compressor, con-denser) to prevent possible burn.
- The appliance must not be located close to radiators or cookers.
- Make sure that the mains plug is accessible

Safety information



after the installation of the appliance.

Service

- Any electrical work required to do the servicing of the appliance should be carried out by a qualified electrician or competent person.
- This product must be serviced by an authorized Service Center, and only genuine spare parts must be used.

Energysaving

- Don't put hot food in the appliance;
- Don't pack food close together as this prevents air circulating;
- Make sure food don't touch the back of the compartment(s);
- If electricity goes off, don't open the door(s);
- Don't open the door(s) frequently;
- Don't keep the door(s) open for too long time;
- Don't set the thermostat on exceeding cold temperatures;

Safety information



- Some accessories, such as drawers, can be removed to get larger storage volume and lower energy consumption.

EnvironmentProtection

 This appliance does not contain gasses which could damage the ozone layer, in either its refrigerant circuit or insulation materials. The appliance shall not be discarded together with the urban refuse and rubbish. The insulation foam contains flammable gases: the appliance shall be disposed according to the appliance regulations to obtain from your local authorities. Avoid damaging the cooling unit, especially the heat exchanger. The materials used on this appliance marked by the symbol  are recyclable.

 The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for therecycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help

Safety information



prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.


Packaging materials

The materials with the symbol are recyclable. Dispose the packaging in a suitable collection containers to recycle it.

Disposal of the appliance

1. Disconnect the mains plug from the mains socket.
2. Cut off the mains cable and discard it.

Overview

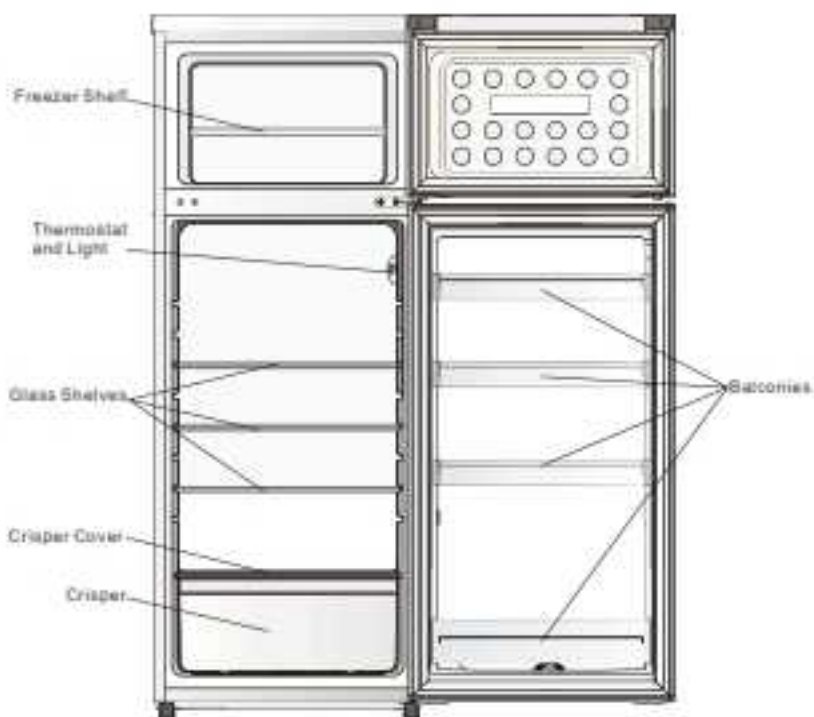


This illustration is only for hinting, the detail please check your appliance.

Reverse Door


Tool required: Philips screwdriver, Flat bladed screwdriver, Hexagonal spanner.

- Ensure the unit is unplugged and empty.
- To take the door off, it is necessary to tilt the unit backwards. You should rest the unit on something solid so that it will not slip during the door reversing process.
- All parts removed must be saved to do the reinstallation of the door.
- Do not lay the unit flat as this may damage the coolant system.
- It's better that 2 people handle the unit during assembly.


1. Remove four screws in top cover and then lift it.

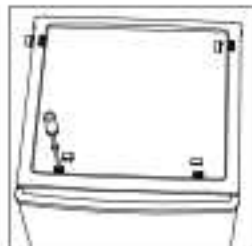

2. Unscrew top hinge and then remove upper door and place it on a soft pad to avoid scratch.

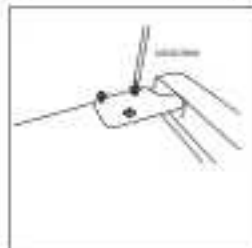

3. Remove the pin with a screwdriver and flip the hinge bracket. Then refit the pin in hinge bracket.

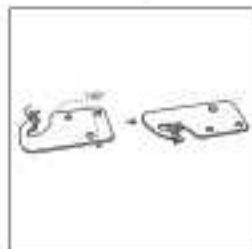


Reverse Door


4. Unscrew middle hinge. Then lift lower door and place it on a soft pad to avoid scratch.




5. Move the hinge hole covers from left side to right side.

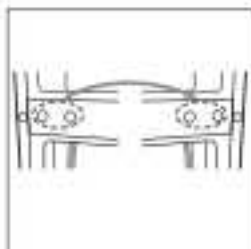

6. Unscrew bottom hinge. Then remove the adjustable feet from both side.

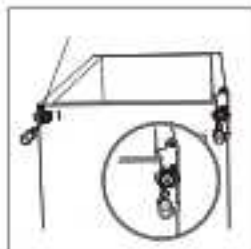


7. Unscrew and remove the bottom hinge pin, turn the bracket over and replace it.

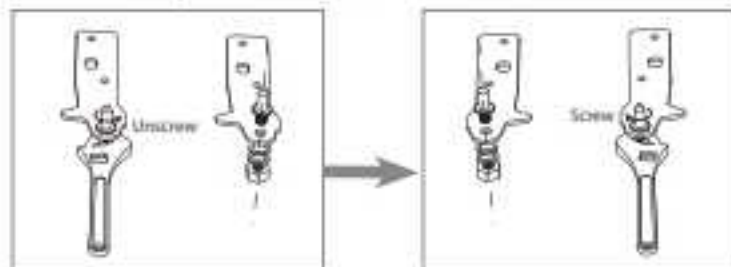


Reverse Door

8. Refit the bracket fitting the bottom hinge pin. Replace both adjustable feet. Transfer the lower door to the property position.

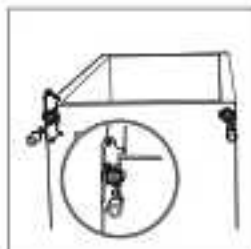

9. Make the middle hinge reverse the direction 180°, then transfer it to the left property position. Make the middle hinge pin in the upper hole of the lower door, then tight the bolts.

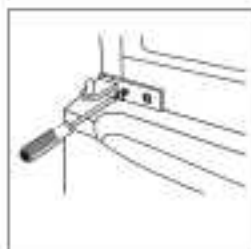

10. Place the upper door back on. Ensure the door is aligned horizontally and vertically so that the seal are closed on all sides, before finally tightening the top hinge. Then insert the hinge and screw it to the top of the unit.




11. Put the top cover and then screw back.




Installation

Install door external handle (if external handle is present)

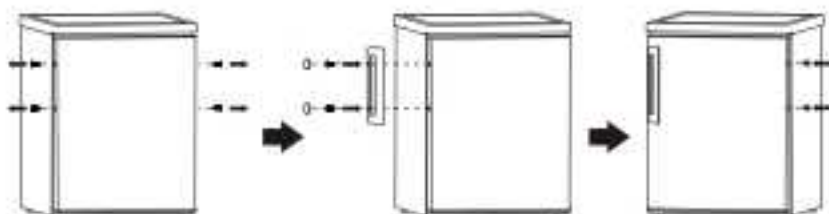

Space Requirement


- Keep enough space of door open.
- Keep at least 50mm gap at two sides.

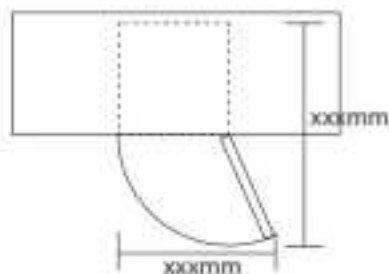

Levelling the unit

To do this adjust the two levelling feet at front of the unit.

If the unit is not level, the doors and magnetic seal alignments will not be covered properly.

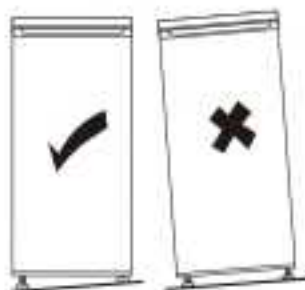

Installation

Positioning

Install this appliance at a location where the ambient temperature corresponds to the climate class indicated on the rating plate of the appliance:

Climate class	Ambient temperature
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+16°C to +38°C
T	+16°C to +43°C

Location

The appliance should be installed well away from sources of heat such as radiators, boilers, direct sunlight etc. Ensure that air can circulate freely around the back of the cabinet. To ensure best performance, if the appliance is positioned below an overhanging wall unit, the minimum distance between the top of the cabinet and the wall unit must be at least 100 mm. Ideally, however, the appliance should not be positioned below overhanging wall units. Accurate leveling is ensured by one or more adjustable feet at the base of the cabinet.

 **Warning!** It must be possible to disconnect the appliance from the mains power supply; the plug must therefore be easily accessible after installation.

Electrical connection

Before plugging in, ensure that the voltage and frequency shown on the rating plate correspond to your domestic power supply. The appliance must be earthed. The power supply cable plug is provided with a contact for this purpose. If the domestic power supply socket is not earthed, connect the appliance to a separate earth in compliance with current regulations, consulting a qualified electrician. The manufacturer declines all responsibility if the above safety precautions are not observed. This appliance complies with the E.E.C. Directives.

Daily Use

First use


Cleaning the interior

Before using the appliance for the first time, wash the interior and all internal accessories with lukewarm water and some neutral soap so as to remove the typical smell of a brand new product, then dry thoroughly.

Important! Do not use detergents or abrasive powders, as these will damage the finish.

Temperature Setting

- Plug on your appliance. The internal temperature is controlled by a thermostat. There are 8 settings: 1 is warmest setting and 7 is coldest setting and 0 is off.
- The appliance may not operate at the correct temperature if it is in a particularly hot or if you open the door often.



Freezing fresh food

- The freezer compartment is suitable for freezing fresh food and storing frozen and deep-frozen food for a long time.
- Place the fresh food to be frozen in the freezer compartment.
- The maximum amount of food that can be frozen in 24 hours is specified on the rating plate.
- The freezing process lasts 24 hours: during this period do not add other food to be frozen.

Storing frozen food

When first starting-up or after a period out of use, before putting the product in the compartment let the appliance run at least 2 hours on the higher settings.

Important! In the event of accidental defrosting, for example the power has been off for longer than the value shown in the technical characteristics chart under "rising time", the defrosted food must be consumed quickly or cooked immediately and then re-frozen (after cooked).

Thawing

Deep-frozen or frozen food, prior to be used, can be thawed in the fridge compartment or at room temperature, depending on the time available for this operation.

Small pieces may even be cooked still frozen, directly from the freezer. In this case, cooking will take longer.

Ice-cube

This appliance may be equipped with one or more ice-cube to produce ice.

Accessories

Movable shelves

The walls of the refrigerator are equipped with a series of runners so that the shelves can be positioned as desired.



Positioning the door balconies

To permit storage of food packages of various sizes, the door balconies can be placed at different heights. To make these adjustments proceed as follows: gradually pull the balcony in the direction of the arrows until it comes free, then reposition as required.



Daily Use

Helpful hints and tips

To help you make the most of the freezing process, here are some important hints:

- the maximum quantity of food which can be frozen in 24 hrs. is shown on the rating plate;
- the freezing process takes 24 hours. No further food to be frozen should be added during this period;
- only freeze top quality, fresh and thoroughly cleaned, foodstuffs;
- prepare food in small portions to enable it to be rapidly and completely frozen and to make it possible subsequently to thaw only the quantity required;
- wrap up the food in aluminium foil or polythene and make sure that the packages are airtight;
- do not allow fresh, unfrozen food to touch food which is already frozen, thus avoiding a rise in temperature of the latter;
- lean foods store better and longer than fatty ones; salt reduces the storage life of food;
- water ices, if consumed immediately after removal from the freezer compartment, can possibly cause the skin to be freeze burnt;
- it is advisable to show the freezing in date on each individual pack to enable you removal from the freezer compartment, can possibly cause the skin to be freeze burnt;
- it is advisable to show the freezing in date on each individual pack to enable you to keep tab of the storage time.

Hints for storage of frozen food

To obtain the best performance from this appliance, you should:

- make sure that the commercially frozen foodstuffs were adequately stored by the retailer;
- be sure that frozen foodstuffs are transferred from the food store to the freezer in the shortest possible time;
- not open the door frequently or leave it open longer than absolutely necessary;
- since defrosted, food deteriorates rapidly and cannot be re-frozen;
- do not exceed the storage period indicated by the food manufacture.

Hints for fresh food refrigeration

To obtain the best performance:

- Do not store warm food or evaporating liquids in the refrigerator
- Do cover or wrap the food, particularly if it has a strong flavour
- Make (all types): wrap in polythene bags and place on the glass shelves above the vegetable drawer.
- For safety, store in this way only one or two days at the most.
- Cooked foods, cold dishes, etc.... these should be covered and may be placed on any shelf.
- Fruit and vegetables: these should be thoroughly cleaned and placed in the special drawer(s) provided.
- butter and cheese: these should be placed in special airtight containers or wrapped in aluminum foil or polythene bags to exclude as much air as possible.
- Milk bottles: these should have a cap and should be stored in the balconies on the door.
- Bananas, potatoes, onions and garlic, if not packed, must not be kept in the fridge.

Cleaning


For hygienic reasons the appliance interior, including interior accessories, should be cleaned regularly.

-  **Caution!** The appliance may not be connected to the mains during cleaning. Danger of electrical shock! Before cleaning switch the appliance off and remove the plug from the mains, or switch off or turn out the circuit breaker or fuse. Never clean the appliance with a steam cleaner. Moisture could accumulate in electrical components, danger of electrical shock! Hot vapors can lead to the damage of plastic parts. The appliance must be dry before it is placed back into service.

Important! Etheral oils and organic solvents can attack plastic parts, e.g. lemon juice or the juice from orange peel, butyric acid, cleanser that contain acetic acid.

Clean drain hole

To avoid defrost water overflowing into the fridge, periodically clean the drain hole at back of fridge compartment. Use a cleaner to clean the hole as showed in right picture.

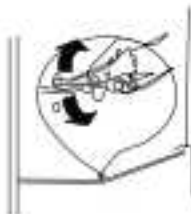

117 If the consumer is in touch of appliance.

Daily Use

- Do not allow such substances to come into contact the appliance parts.
- Do not use any abrasive cleaners.
- Remove the food from the freezer. Store them in a cool place, well covered.
- Switch the appliance off and remove the plug from the mains, or switch-off or turn out the circuit breaker of fuse.
- Clean the appliance and the interior accessories with a cloth and lukewarm water. After cleaning wipe with fresh water and rub dry.
- After everything is dry place appliance back into service.

Defrosting of the freezer

The freezer compartment, however, will become progressively covered with frost. This should be removed. Never use sharp metal tools to scrape off frost from the evaporator as you could damage it. However, when the ice becomes very thick on the inner liner, complete defrosting should be carried out as follows:

- pull out the plug from the socket;
- remove all stored food, wrap it in several layers of newspaper and put it in a cool place;
- keep the door open, and placing a basin underneath of the appliance to collect the defrost water;
- when defrosting is completed, dry the interior thoroughly;
- replace the plug in the power socket to run the appliance again.

Replace the lamp

The internal light is a LED type. To replace the lamp, please contact qualified technician.



Daily Use

Troubleshooting



Caution! Before troubleshooting, disconnect the power supply. Only a qualified electrician of competent person must do the troubleshooting that is not in this manual.

Important! There are some sounds during normal use (compressor, refrigerant circulation).

Problem	Possible cause	Solution
Appliance does not work	Temperature regulation knob is set at number "0".	Set the knob at other number to switch on the appliance.
	Mains plug is not plugged in or is loose	Insert mains plug.
	Fuse has blown or is defective	Check fuse, replace if necessary.
	Socket is defective	Mains malfunctions are to be corrected by an electrician.
The food is too warm.	Temperature is not properly adjusted.	Please look in the Initial Temperature Setting section.
	Door was open for an extended period.	Open the door only as long as necessary.
	A large quantity of warm food was placed in the appliance within the last 24 hours.	Turn the temperature regulation to a colder setting temporarily.
	The appliance is near a heat source.	Please look in the installation location section.
Appliance cools too much.	Temperature is set too cold.	Turn the temperature regulation knob to a warmer setting temporarily.
Unusual noises	Appliance is not level.	Re-adjust the feet.
	The appliance is touching the wall or other objects.	Move the appliance slightly.
	A component, e.g. a pipe, on the rear of the appliance is touching another part of the appliance or the wall.	If necessary, carefully bend the component out of the way.
Water on the floor	Water drain hole is blocked.	See the Cleaning section.
Side panel is hot	Condenser is inside the panel.	It's normal.

If the malfunction shows again, contact the Service Center.

Correct Disposal of this product



Según la directiva *Waste of Electrical and Electronic Equipment (WEEE)*, los residuos WEEE han de recogerse y tratarse por separado. Si, en el futuro, necesita desprenderse de este producto, NO lo ponga en los residuos domésticos, envíelo a los puntos de recogida WEEE si existen

Brand	DNWA
Model	F166Z
Energy Class	A+
Certification	CE
Yearly Energy Consumption	234kWh / year
Net Volume Refrigerator	199L
Net Volume Freezer	53L
No. of Stars	4
Defrosting System	Defrost
Autonomy for Black Out	1200min
Freezing Capacity	2.5kg/24h
Climatic Class	ST
Noise Level	42dB
Overall Dimensions	550x580x1645 mm
Rated Voltage	220-240V
Rated Current	0.60A

CE CERTIFICATION

It has been determined that this product complies with the Directive of Low Voltage (2014/35/EU), the Electromagnetic Compatibility Directive (2014/30/EU) and the RoHS Directive (2011/65/EU).



Made in P.R. C. -Imported by:
PROSELCO S.A. C.I.F. A-08347635
C/ Del oro 37 , PG. IND. SUR 28770 ,
COLMENAR VIEJO, MADRID, SPAIN

